# HOME
## DECORATORS
## C O L L E C T I O N

HDC# 10431  MFG# TW-18718WE / TW-18718EO
REFLECTIONS HAMPER 32"Hx17"Wx13"D

## ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

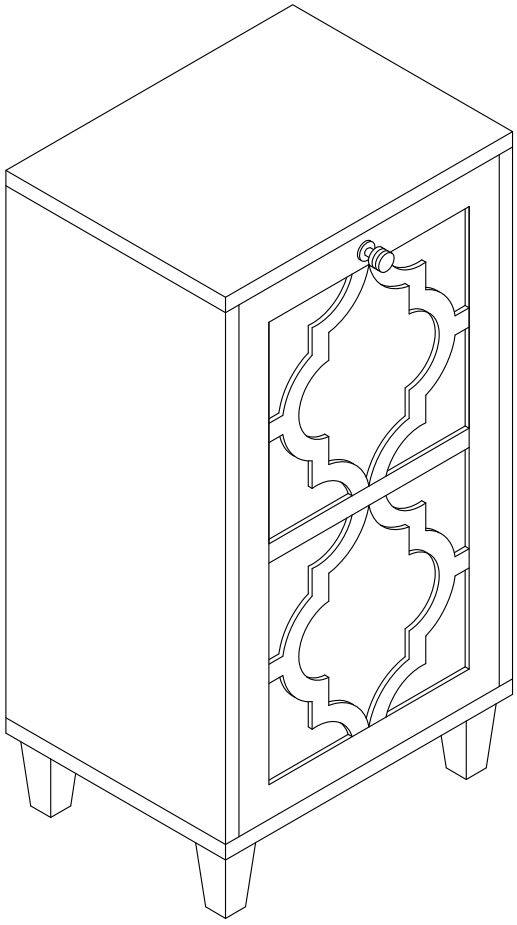

# *BEFORE ASSEMBLY*

**IMPORTANT NOTE:** READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

## ASSEMBLY TOOLS REQUIRED

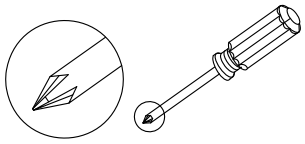

"+"Screw driver

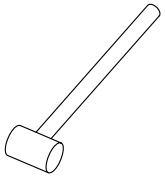

Rubber Mallet

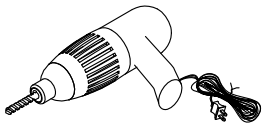

Electric drill

## *WOODEN DOWEL INSTALLATION PROCEDURE*

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND
PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

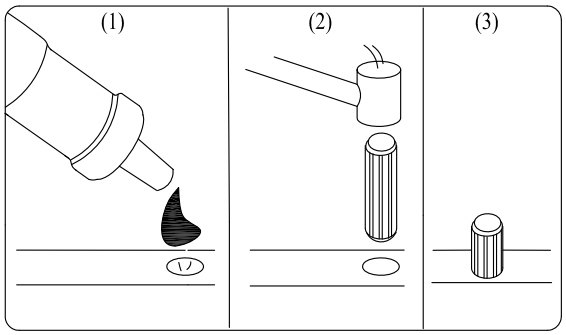


## *HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN*

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.
TOOL NEEDED: ″+″ SCREW DRIVER
STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A ″+″ SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).
STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER MALLET GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.
STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A ″+″ SCREWDRIVER.

DETAIL STEP PLEASE SEE THE BELOW PICTURE.

| VERTICAL CONNECTION | | HORIZONTAL CONNECTION | |
|---|---|---|---|
| (1) 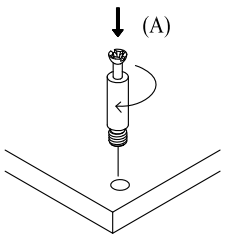  | (2) 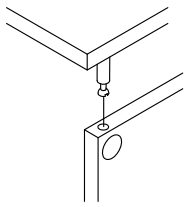 | (1) 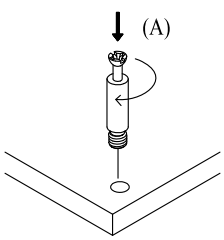  | (2) 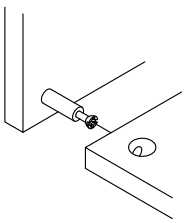 |
| (3) 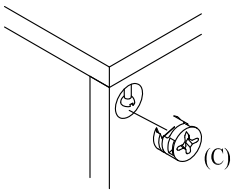  | (4) 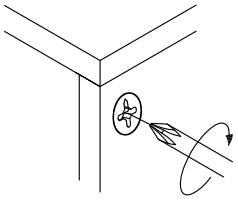 | (3) 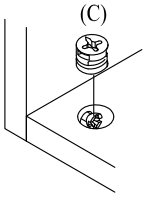  | (4) 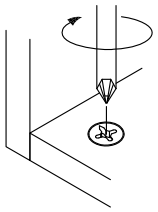 |
| (5) 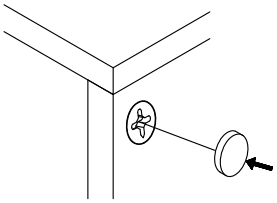 | | (5) 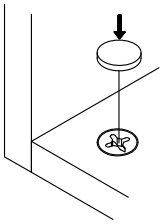 | |

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PART ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

IMPORTANT NOTE: FOLLOW INSTRUCTIONS LISTED BELOW IN PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

# HARDWARE LIST

| | | | | |
|---|---|---|---|---|
| WOOD DOWEL 10 PCS  Ø8 x 30mm (1) | CAM BOLT CAM-LOCK 8 SETS  (2) | ROUND HEAD BOLT FLAT WASHER SPRING WASHER 8 SETS  Ø6 x 32mm (3) | FLAT HEAD SCREW 6 PCS  Ø4 x 25mm (4) | KNOB BOLT 1 SET  ø3x19mm (5) |
| ROUND HEAD SCREW 13 PCS Ø3 x 12mm (6) | BOLT 2 PCS Ø6 x 25mm (7) | ALLEN KEY 1 PC  (8) | TILTING PREVENT HARDWARE 1SET 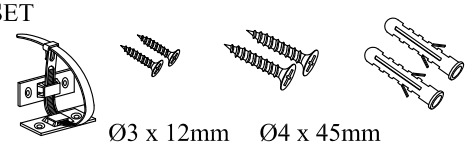 Ø3 x 12mm Ø4 x 45mm (9) | |
| GLUE 1 PC  (10) | | | | |

# PARTS LIST

| | | |
|---|---|---|
| BOTTOM PANEL<br>1 PC<br> 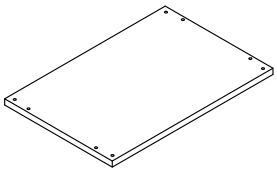 <br>A | LEG<br>4 PCS<br> <br>B | RIGHT SIDE PANEL<br>1 PC<br> 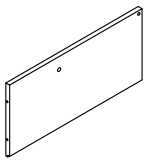 <br>C |
| LEFT SIDE PANEL<br>1 PC<br> 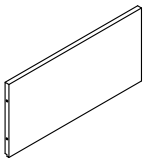 <br>D | TOP PANEL<br>1 PC<br> 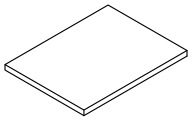 <br>E | BACK PANEL<br>1 PC<br>  <br>F |
| HAMPER LEFT SIDE PANEL<br>1 PC<br> 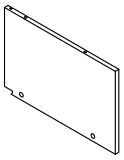 <br>G | HAMPER RIGHT SIDE PANEL<br>1 PC<br> 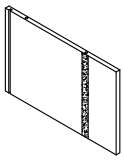 <br>H | HAMPER FRONT PANEL<br>1 PC<br> 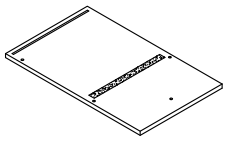 <br>I |
| HAMPER BACK PANEL<br>1 PC<br> 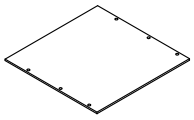 <br>J | HAMPER BOTTOM PANEL<br>1 PC<br>  <br>K | FABRIC BAG<br>1 PC<br> <br>L |
| | | |
| | | |

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

STEP 1: ASSEMBLE BOTTOM PANEL (A) AND LEG (B)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (3) TO ASSEMBLE BOTTOM PANEL (A) AND LEG (B) TOGETHER BY ALLEN KEY (8).

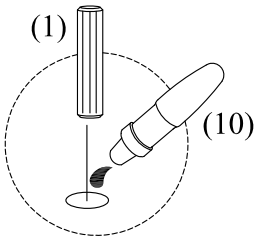


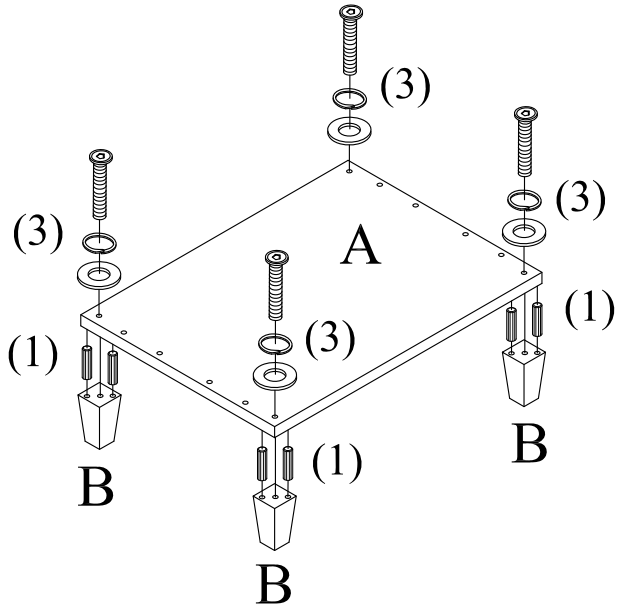


STEP 2: ASSEMBLE SIDE PANEL (C) & (D)

- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (3) TO ASSEMBLE SIDE PANEL (C) & (D) AND BOTTOM PANEL (A) TOGETHER BY ALLEN KEY (8).

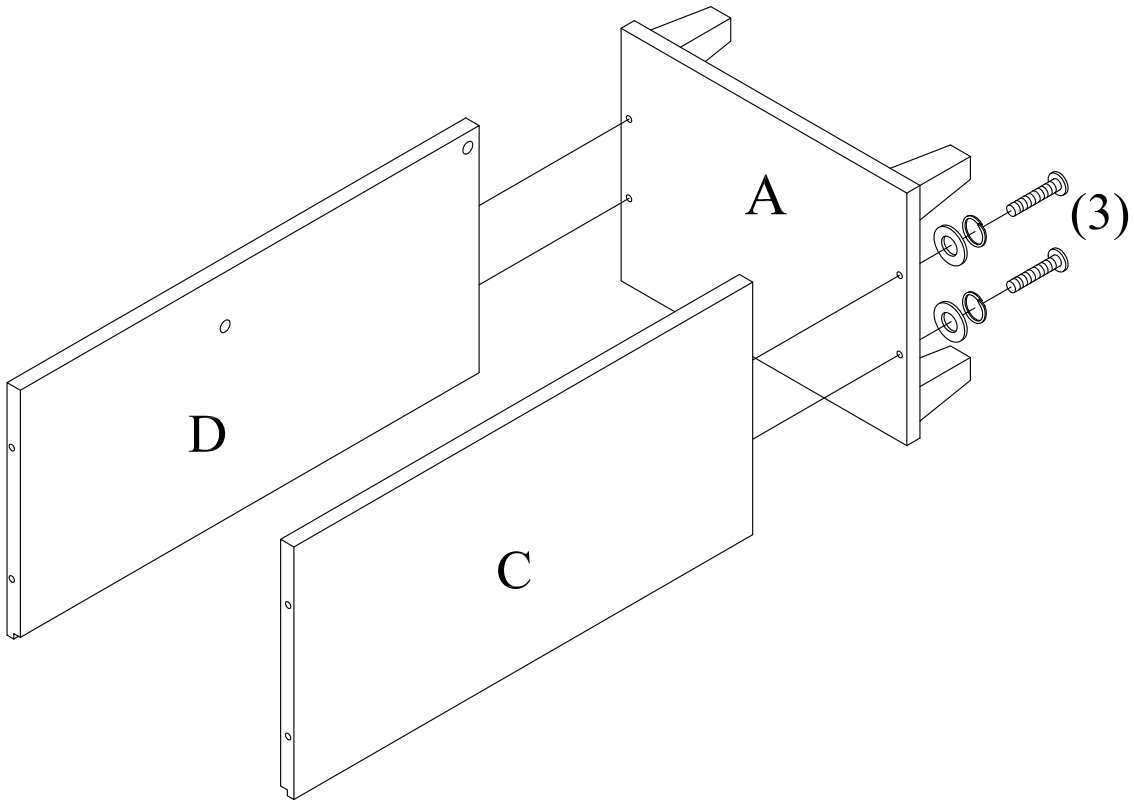

STEP 3: ASSEMBLE TOP PANEL (E)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM-BLOT & CAM-LOCK (2) TO ASSEMBLE SIDE PANEL (C & D) AND TOP PANEL (E) TOGETHER.

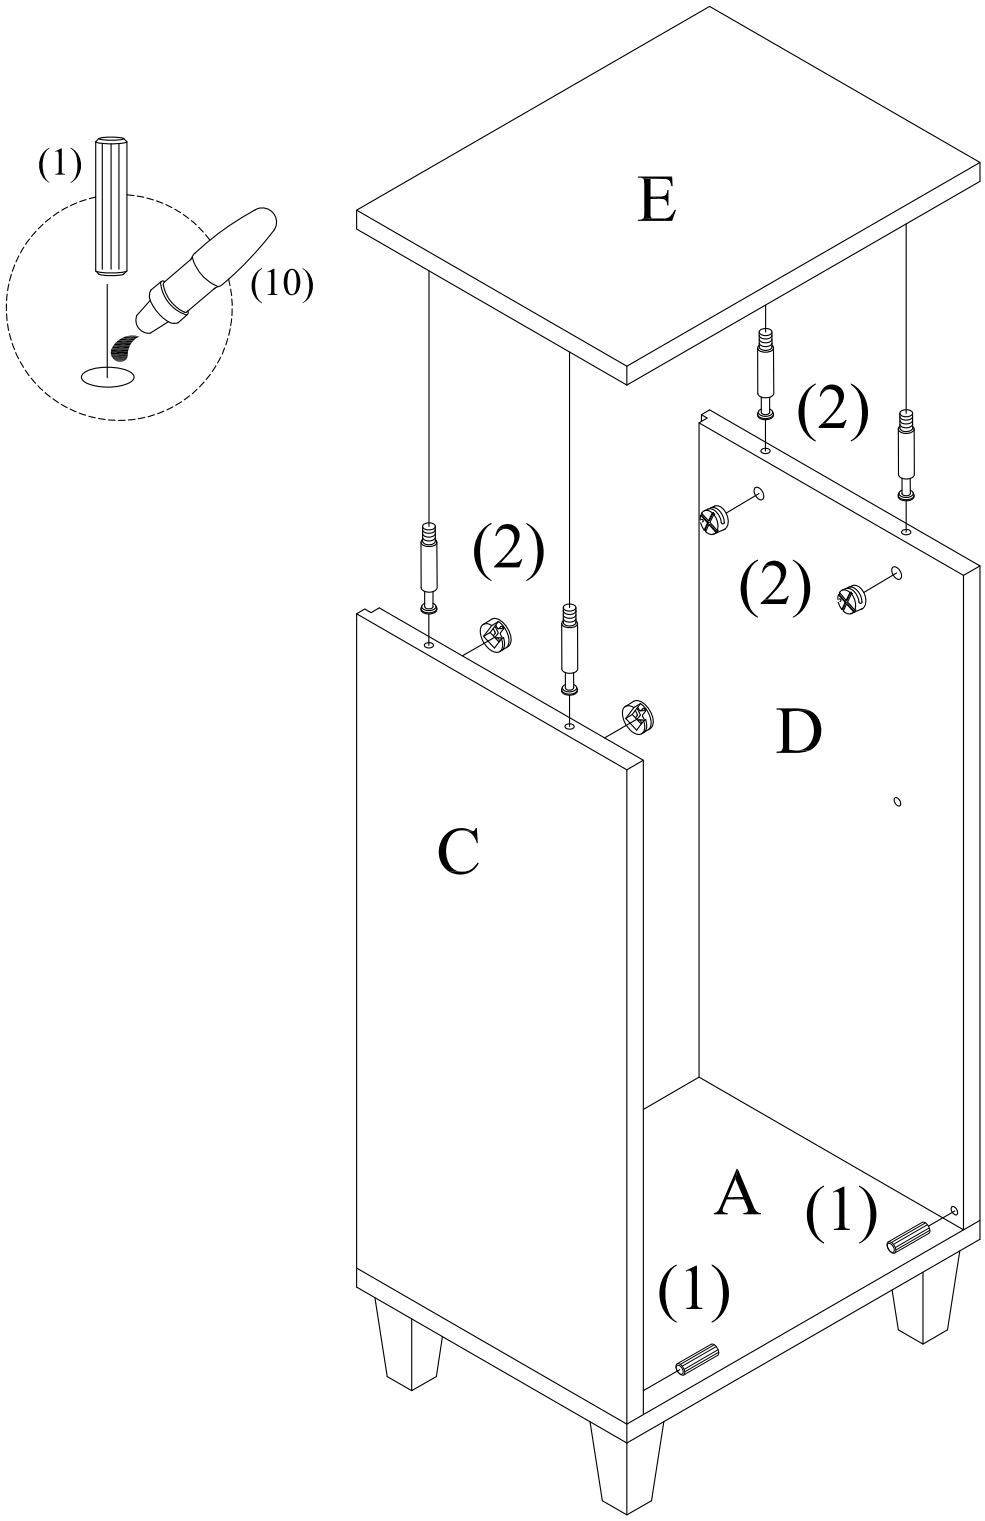

STEP 4: ASSEMBLE BACK PANEL (F)

• USE ROUND HEAD SCREW (6) TO ATTACH BACK PANEL (F) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE: BEFORE YOU ASSEMBLE THE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS HAVE AN EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS UNTIL EVENLY SPACED, THEN ATTACH BACK PANEL.

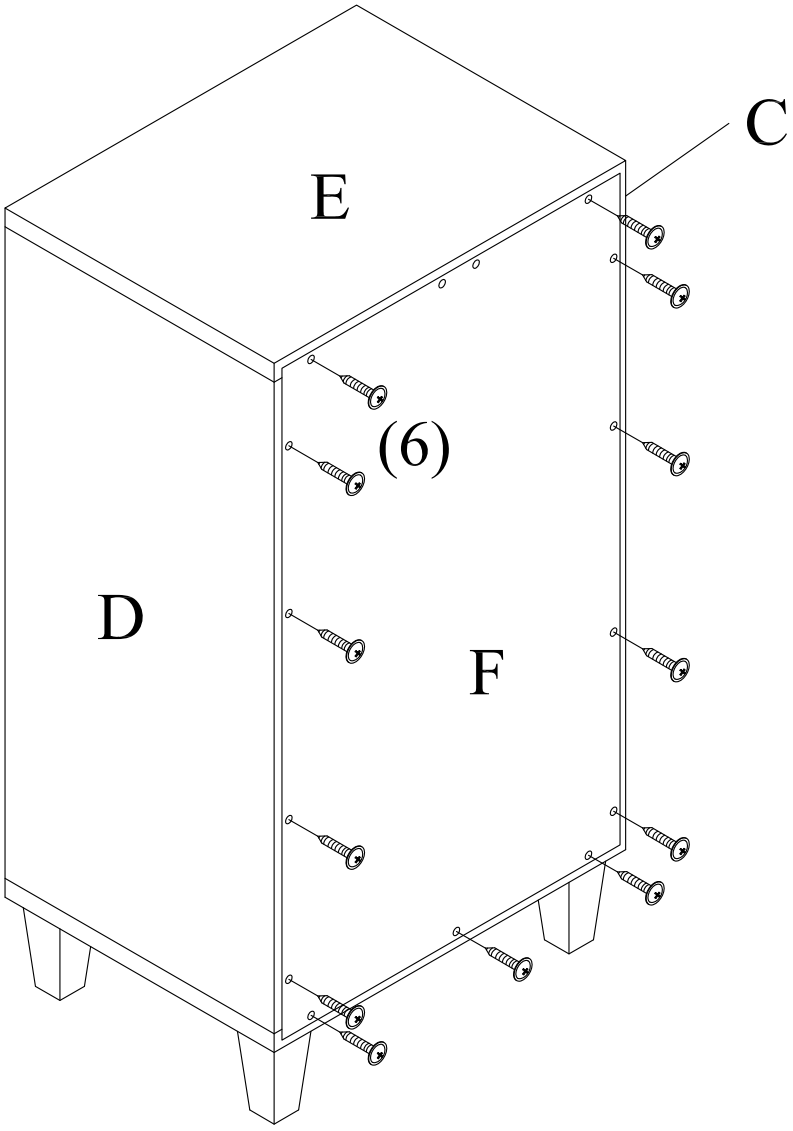

STEP 5: ASSEMBLE HAMPER SIDE PANEL (G & H) AND HAMPER FRONT PANEL (I)

- USE CAM-BLOT & CAM-LOCK (2) TO ASSEMBLE HAMPER SIDE PANEL (G & H) AND HAMPER FRONT PANEL (I) TOGETHER AS SHOWN.

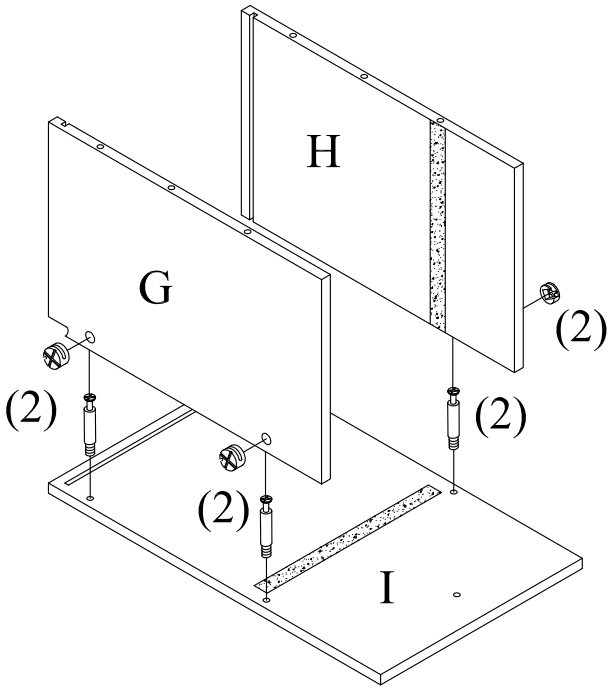


STEP 6: ASSEMBLE HAMPER BACK PANEL (J) AND HAMPER BOTTOM PANEL (K)

- INSERT THE HAMPER BOTTOM PANEL (K) INTO SLOTS ON HAMPER SIDE PANELS (G & H).
- USE FLAT HEAD SCREW (4) TO ASSEMBLE HAMPER BACK PANEL (J) AND HAMPER SIDE PANEL (G & H) TOGETHER AS SHOWN.

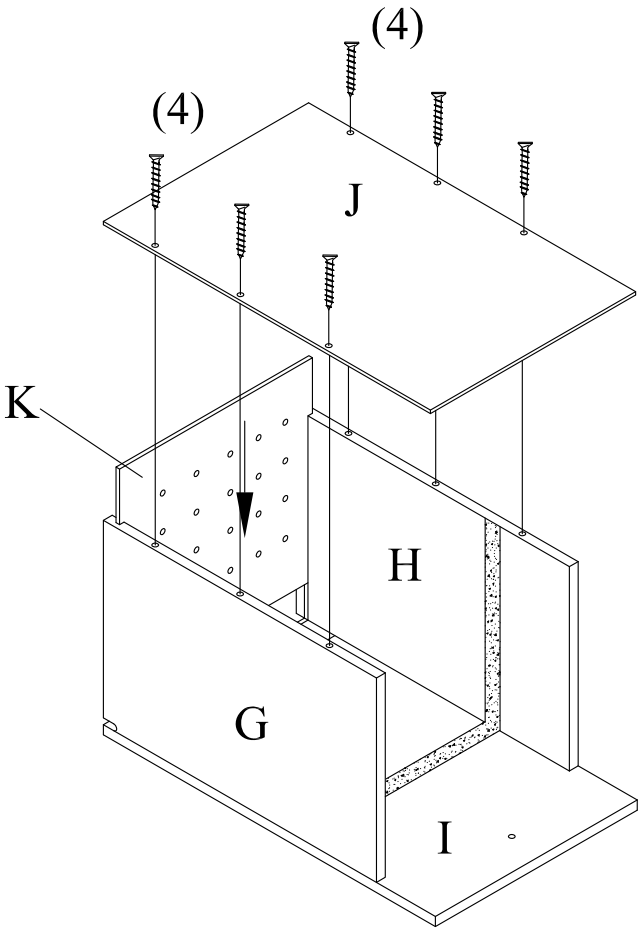

STEP 7: PLACE HAMPER

- PLACE THE SLOTS ON THE BOTTOM OF THE HAMPER ONTO THE WOOD DOWELS (1) PROPERLY AS SHOWN.

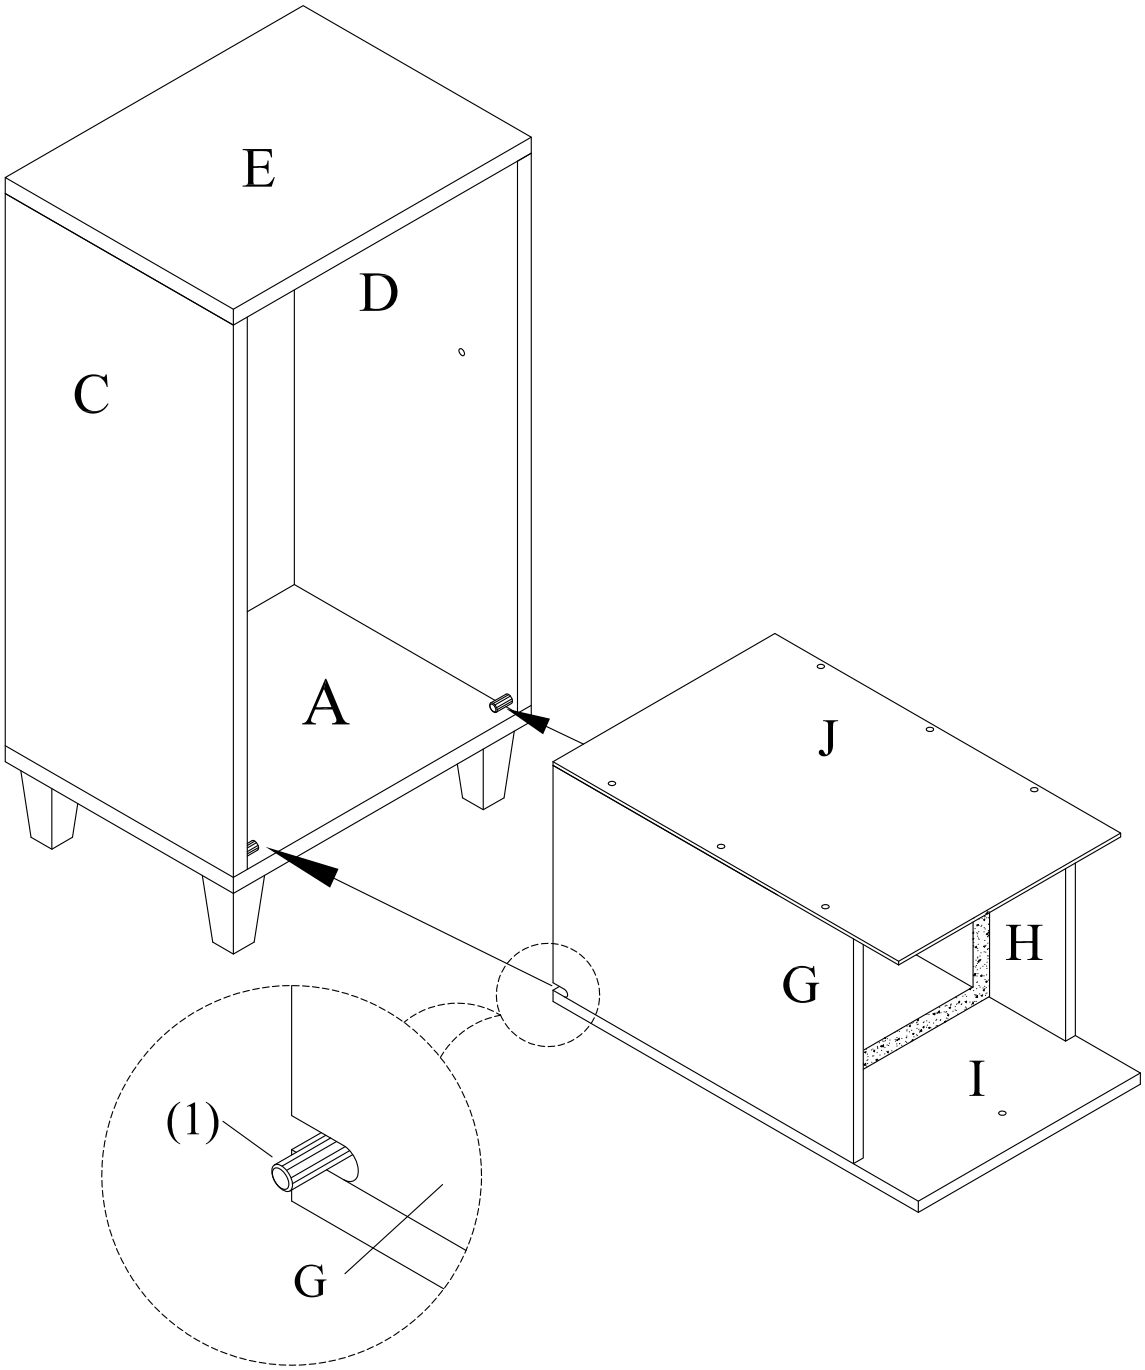

STEP 8: ASSEMBLE BOLT (7) AND KNOB (5)

- TIGHTEN BOLT (7) ONTO SIDE PANEL (C & D) PROPERLY AS SHOWN.
- USE ROUND HEAD BOLT (5) TO ATTACH KNOB (5) ONTO HAMPER FRONT PANEL (I).

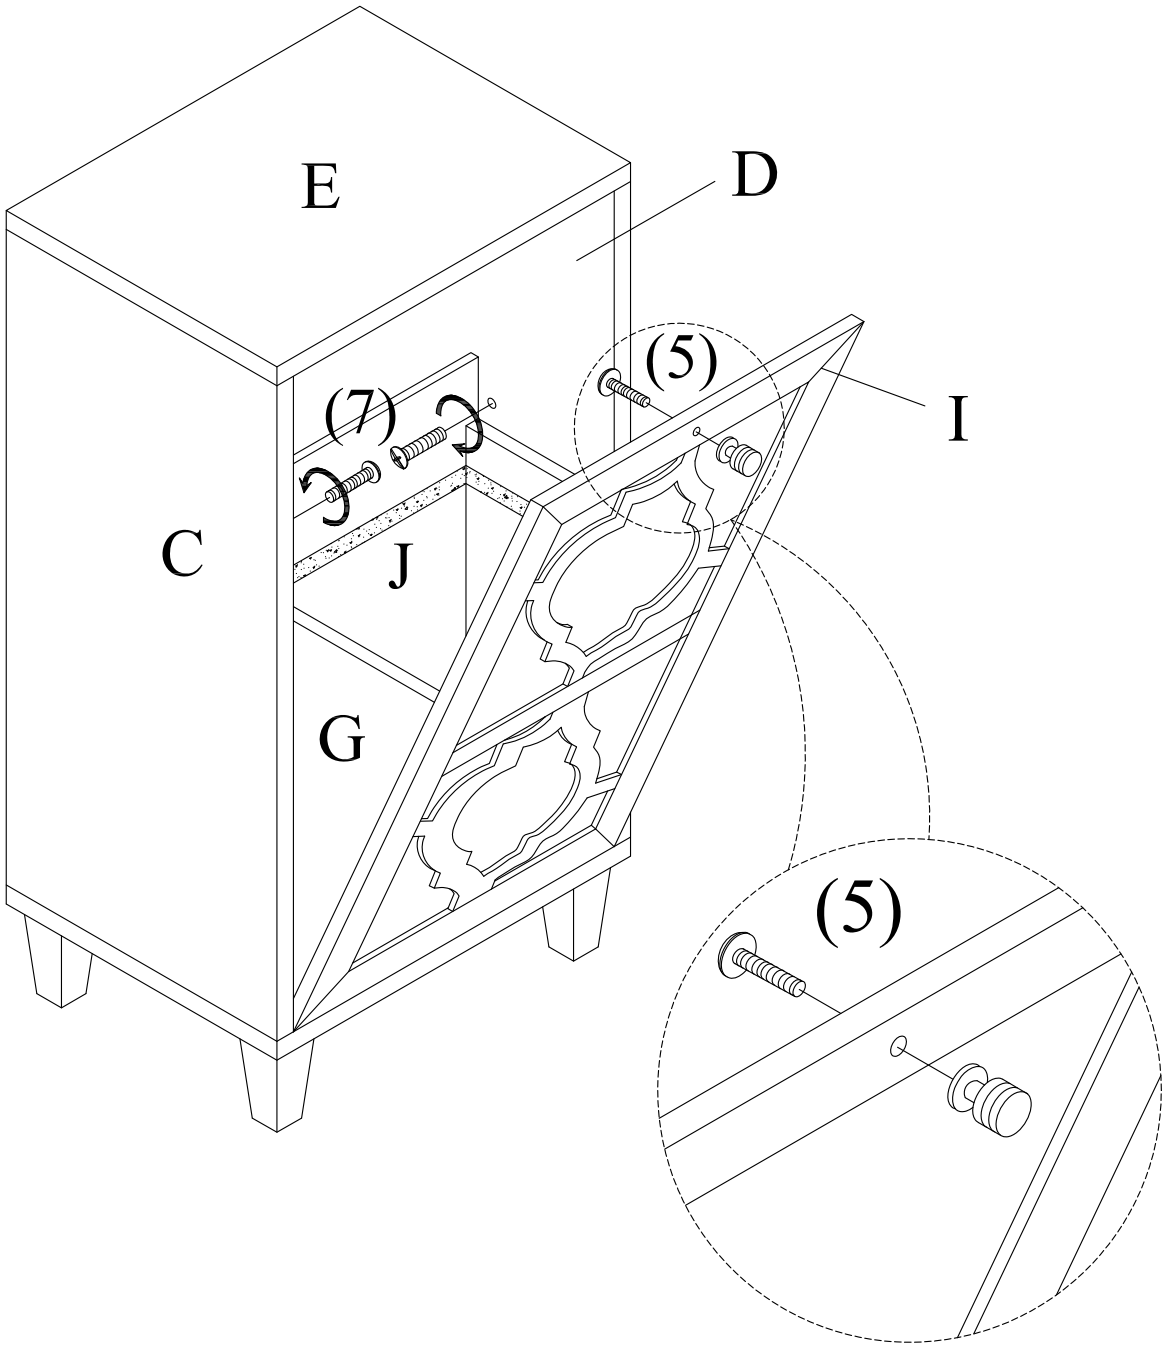

STEP 9: PLACE FABRIC BAG (L)

• PUT FABRIC BAG (L) INTO THE HAMPER AND THEN STICK THE MAGIC TAPE PROPERLY.

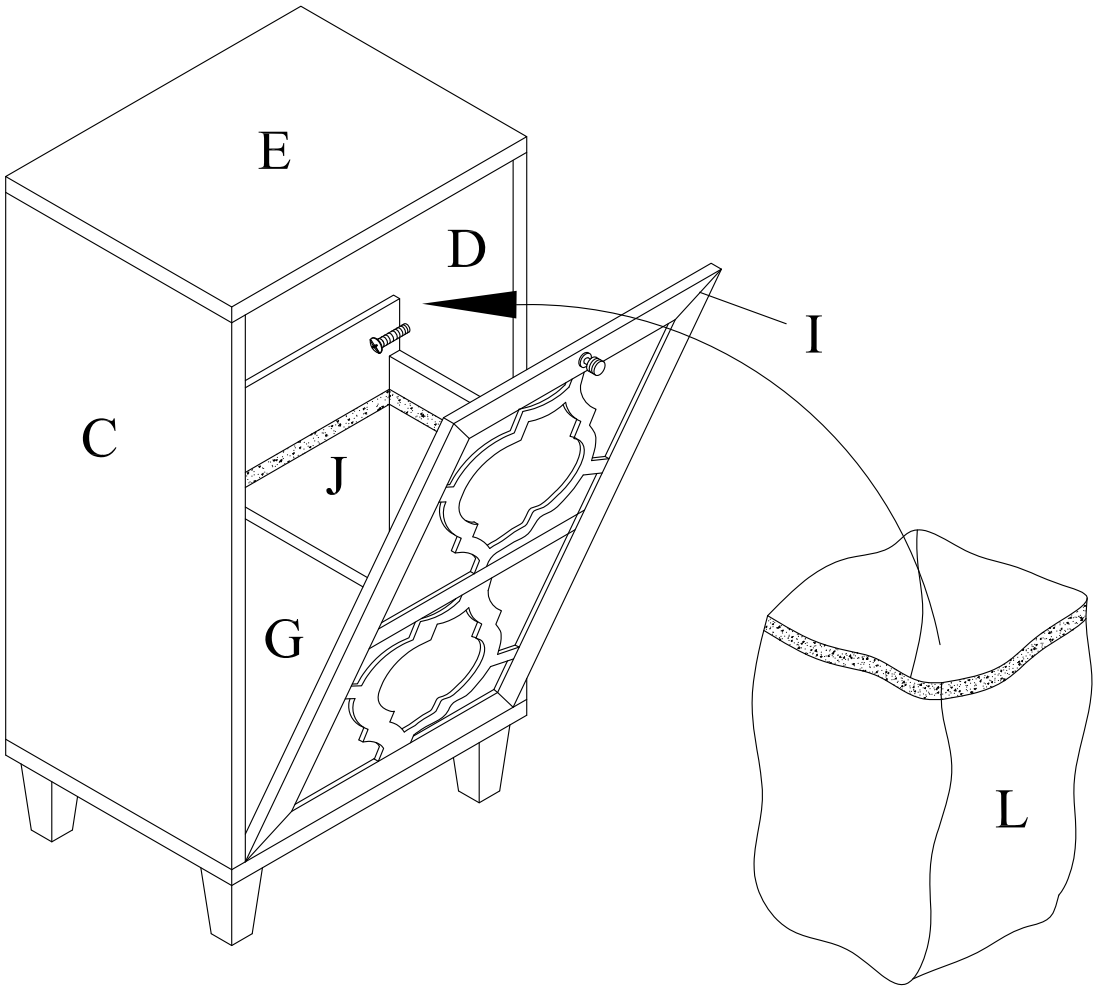

STEP 10: ASSEMBLE PREVENT DEVICE (8)

- USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF WALL, INSERT 2 GECKOS INTO THE 2 HOLES BY RUBBER MALLET, USE TWO LONG SCREWS TO ATTACH ONE PLASTIC SLICE ONTO WALL. THEN USE TWO SHORT SCREWS TO ATTACH ANOTHER PLASTIC SLICE ON THE BACK OF PRE-ASSEMBLED PRODUCT.
- USE THE PLASTIC ROPE TO LINK THE PRODUCT AND WALL TOGETHER.

WARNING: THE TILTING PREVENT HARDWARE MUST BE USED AS A PART OF ASSEMBLY, OTHERWISE, TILTING DANGER MAY BE CAUSED.